

INTRODUCING THE NEW

# Pro Plus Collection

## Simple Solutions for Complex Jobs

- Designed for larger-scale, commercial projects
- Ideal for new construction or renovation jobs
- Requires less labor, time and total cost compared to tile
- Creates a timeless look that lasts even in high-traffic spaces

 WOW. WETWALL.

[CLICK HERE TO LEARN MORE ►](#)



### LARGER-SCALE SOLUTIONS

Ideal for jobs requiring at least 9,700 sqft of material with a 1/2 truckload order minimum.



### BEATS THE COST OF TILE

Total start-to-finish price for materials, time and labor is less than tile.



### DEPENDABLE TIMELINES

Quick installation & reliable lead times help manage deadlines with clear expectations.

# Easy on the eyes. And the timeline.


Choose from an array of 11 classic looks that will stand the test of time.



**SILKEN WEAVE**  
W7071



**BIRCH BRANCHES**  
W7049

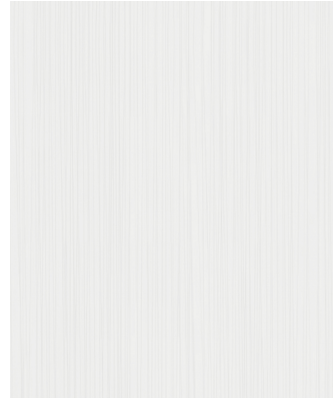

**TRANQUIL LINES**  
W7074



**GRACEFUL LINES**  
W7075



**ASHEN WALNUT**  
W7070



**SERENITY WEAVE**  
W7072



**CLASSIC WEAVE**  
W7073




**CHAMPAGNE WHISPER**  
W7069



**HARMONY MIST**  
W7066



**URBAN SOAPSTONE**  
W7067

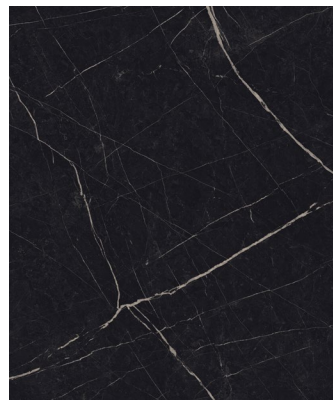

**MIDNIGHT ELEGANCE**  
W7068

[CLICK HERE TO LEARN MORE ►](#)

 **WOW. WETWALL.**



## Back Wall Configurations



### TONGUE EDGE + FLAT EDGE

The easy-to-handle TE/FE panels are ideal for a seamed back wall.



### GROOVE EDGE + FLAT EDGE

The easy-to-handle GE/FE panels are ideal for a seamed back wall.



### FLAT EDGE + FLAT EDGE

The FE/FE panels are best for a one piece wall.

## Wing Wall Configurations



### BULLNOSE EDGE + FLAT EDGE

The Bullnose Edge is perfect for wing wall or terminating walls.

## Utility Wall Configurations



### TONGUE EDGE + GROOVE EDGE

This most flexible panel is used when you want to continue the design beyond the single-panel widths.



### TONGUE EDGE + BULLNOSE EDGE

Use this Bullnose Edge combined with a TE to cap the end of the TE/GE panels.



### GROOVE EDGE + BULLNOSE EDGE

Use this Bullnose Edge combined with a GE to cap the end of the TE/GE panels.



### BULLNOSE EDGE + BULLNOSE EDGE

With two Bullnose Edges, this is the ideal panel to feature behind a free-standing bathtub or a stand-alone wall.

## Pro Plus Panel Sizes



### WIDTH

36", 48", 60"

### HEIGHT

96"



[CLICK HERE TO LEARN MORE ►](#)

 WOW. WETWALL.